

LARGUEUR & LEASH

1. ATTACHEZ VOTRE LEASH À LA LIFE LINE

Ne décollez jamais votre aile sans avoir relié votre leash à la Life Line.

A) Connectez le leash en mode standard

Connectez le mousqueton (Leash S & M) ou le pigtail (Leash L) à la petite boucle de l'anneau inox.

B) Connectez le leash en mode suicide

ATTENTION : seul le mode standard permet de réduire efficacement la puissance du kite à tout moment. F-ONE recommande de ne pas utiliser le mode suicide. Celui-ci est réservé à des pratiquants très expérimentés ayant de besoins spécifiques. Passez la grande boucle de l'anneau inox dans le Chicken Loop. Connectez le mousqueton (Leash S & M) ou le pigtail (Leash L) à la petite boucle de l'anneau inox.

2. COMMENT ATTACHER VOTRE LEASH À VOTRE HARNAIS

ATTENTION : notre recommandation de sécurité est d'attacher le leash devant le harnais. Actionnez le largueur du leash pour désolidariser les deux parties. Passez le connecteur dans la spreader bar du harnais, faites une tête d'alouette et serrez (> 1 & 2). Reconnectez votre leash en passant la petite boucle dans



l'aiguille (> 3 & 4), puis réinsérez l'aiguille dans la poignée (> 5). Connectez ensuite votre leash à la boucle de l'anneau inox, soit avec le mousqueton (> 7), soit avec le pigtail (> 8). Nettoyez bien votre système (sable...) avant d'aller dans l'eau.

3. COMMENT LARGUER VOTRE LEASH

Si vous rencontrez des difficultés et que vous devez vous désolidariser complètement de votre aile. Après avoir largué l'aile avec le système de sécurité du Chicken Loop, larguez le leash d'aile (rattaché à votre harnais) en poussant dans le sens de la flèche (> 6). L'aile ne sera plus reliée à vous d'aucune façon. **ATTENTION : l'aile ainsi larguée, la barre et les lignes peuvent heurter gravement les personnes situées sous votre vent.**

4. COMMENT RECONNECTER LE LEASH D'AILE

Récupérez votre aile et sécurisez-la. Faites attention qu'il n'y ait pas de nœuds dans les lignes. Nettoyez bien votre système (sable...) avant de le remonter. Réarmez votre leash en suivant la procédure de connexion ci-dessus.

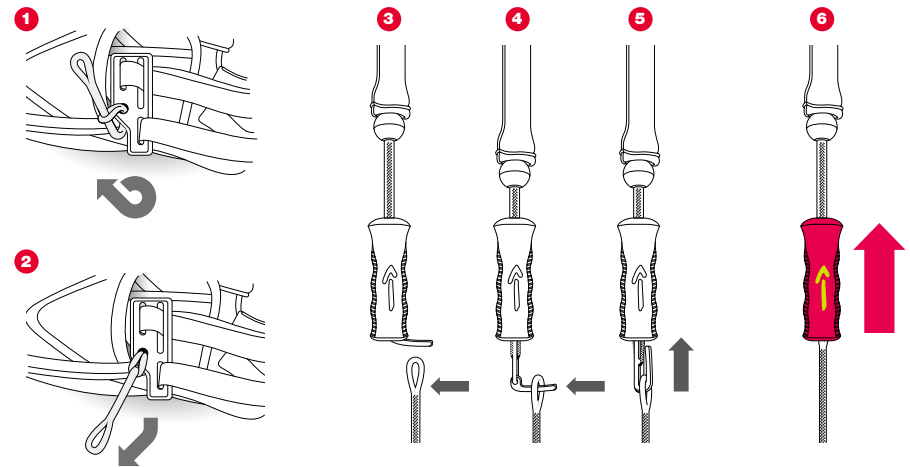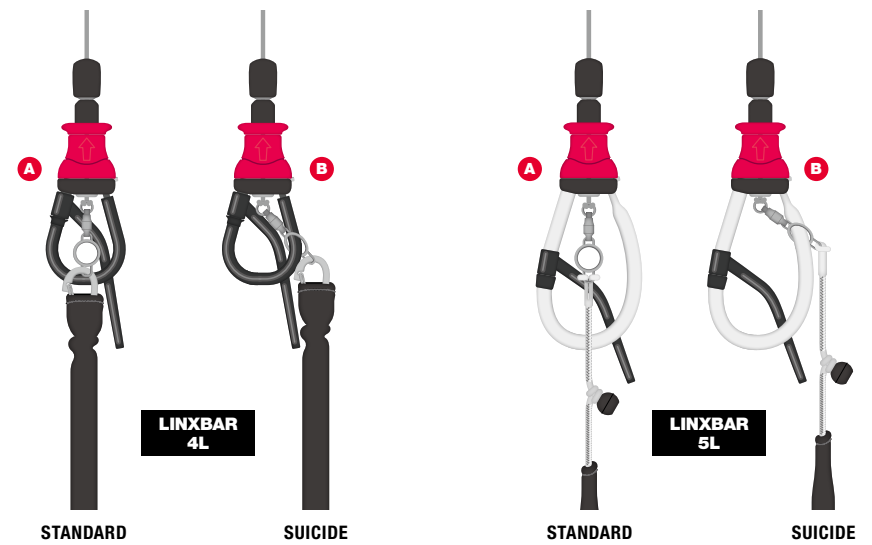

SAFETY RELEASE & LEASH

1. CONNECTING YOUR LEASH TO THE LIFE LINE

Never launch your kite before connecting your leash to the Life Line.

A) Connecting your leash (standard mode)

Connect the snap hook (S & M leashes) or the pigtail (L leash) to the small buckle of the stainless steel ring.

B) Connecting your leash (suicide mode)

CAUTION: the standard mode is the only mode which guarantees the possibility to depower efficiently at any time. F-ONE recommends not to use the suicide mode which is made to answer the specific needs of expert riders only. Fit the Chicken Loop inside the main hole of the stainless steel ring. Connect the snap hook (S & M leashes) or the pigtail (L leash) to the small buckle of the stainless steel ring.

2. CONNECTING YOUR LEASH TO YOUR HARNESS

CAUTION: our safety recommendation is to secure the leash in front of the harness. Trigger the release system of the leash to disconnect the tip. Take the small connector and tie the main loop to the harness's spreader bar (> 1 & 2).

Plug the two parts of your leash back together by fitting the small loop into the needle (> 3 & 4), then tuck the needle into the handle (> 5). Finally, connect your leash to the small buckle of the stainless steel ring, either with the snap hook (> 7), or with the pigtail (> 8). Make sure the release system is clean of sand before going on the water.

3. HOW TO RELEASE THE KITE LEASH

When encountering difficulties, you might need to completely disconnect the kite from you even after having triggered the quick-release of your Chicken Loop. To do so, release the kite leash (tied onto your harness) by pushing the handle in the direction of the arrow (> 6). The kite will then be completely disconnected from you. **CAUTION: when fully disconnected, the kitebar and the lines can hit people located down the wind from you and cause severe injuries.**

4. HOW TO RECONNECT YOUR KITE LEASH

Secure your kite and make sure the lines are not tangled. Thoroughly clean your system (sand...) before reconnecting. Plug back your leash following the connection instructions here above.

